

# SATA III to M.2 & mSATA SSD Enclosure Assembly Guide













## Features

- Standard 2.5", 9.5mm(H) Form Factor
- Support a SATA host & M.2 NGFF SSD device
- M.2 (NGFF) to SATA III Module
- Support SATA Rev. 3.2 DEVSLP function
- Green LED indicates the M.2 SSD's power status
- Red LED indicates the M.2 SSD's active status


## Before Assembly

- Please read through the installation guide first.
- Please check the accessory list before the integration. Contact your local distributor if you find any parts missing.
- Please retain the original package if you need to return the package for RMA.

## Assembling Accessories
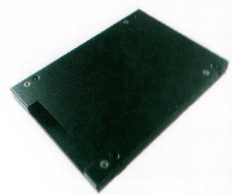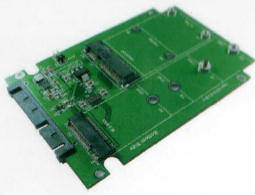
|   |  |   |  |  |
|---|--|---|--|--|
|    |   |    |   |   |
| M3x3 Screw*1  | M3x5 Screw*1   | M3 Nut*1  | Copper Nut<br>H: 1.45mm*1  | M2x6 Screw*3   |
|   |  |   |  |  |
| (for Full Size)<br>M2*3 Screw*2   | M2 Nut *2  | Copper Nut<br>H: 4.0mm*2  | (for Adapter)<br>M2x3 Screw*5  | (for Housing)<br>M2x3 Screw*5  |
|  |  |  |  |  |
| 2.5" Housing (9.5H) *1  |  | Adapter *1  |  |  |


## Assembly

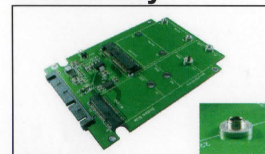

### STEP 1.

#### Make M.2 SSD Stand


Put copper nut on the same side of the NGFF connector. Fix with M3x5mm screw from top to bottom of the adapter.

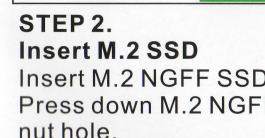

### STEP 2.

#### Insert M.2 SSD

Insert M.2 NGFF SSD into M.2 67pin connector. Press down M.2 NGFF SSD and aim to the copper nut hole.

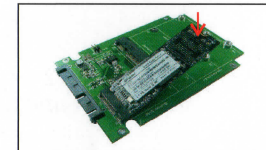

### STEP 3.

#### Fix M.2 SSD


Use M3 nut to fix M.2 NGFF SSD on the adapter, namely complete the assembly. **If your M.2 NGFF SSD is 2280, pls ignore step 1~3. Use M3 x 3 Screw to fix M.2 NGFF SSD.**



### STEP 4.

#### Make mSATA SSD Stand


Put copper nut on the same side of the mSATA connector. Fix with M2x6mm screws from top to bottom of the adapter.

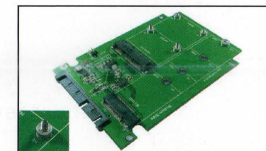

### STEP 5.

#### Insert mSATA SSD


Insert mSATA SSD into mSATA 52pin connector. Press down mSATA SSD and aim to the copper nut hole.

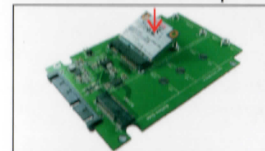

### STEP 6.

#### Fix mSATA SSD


Use M2 nuts to fix mSATA SSD on the adapter, namely complete the assembly. **If your mSATA SSD is 2280, pls ignore step 1~3. Use M2x3 screw to fix mSATA.**

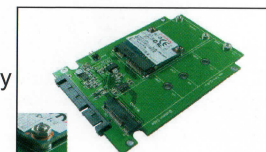

### STEP 7.

#### Fix Adapter & Housing

Assembly adapter into 2.5" SSD with 4pcs of M2x3 screws.

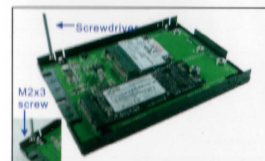

### STEP 5.

#### Combine 2.5" Housing

Cover the Top cover. Use 4pcs of M2x3 screws to fix the housing from broadsides.

CN3 : ON-Device Sleep

